


USB Driver

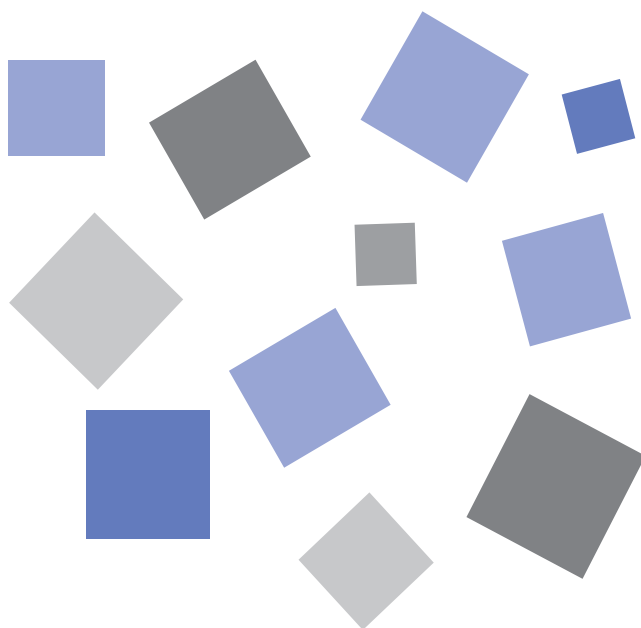

USB Driver Installation Manual

MANUAL NO.GL-USB-UM-157



GRAPHTEC

USB Driver Installation Manual

To connect a GL series device to a PC using the USB interface, the USB driver must be installed on the PC. This manual explains the procedure for installing USB driver version 2.05 or later.

Contents

1. Preparation before Installation	3
2. Launching the Installer.....	3
3. Installation Procedures.....	4
4. Device Driver Confirmation Procedures.....	5
5. Uninstallation Procedures	8


1. Preparation before Installation

- Confirm that the GL series device is not connected to your PC with a USB cable. If it is connected, disconnect the USB cable.
- Close all other software.


2. Launching the Installer

2-1. Run D:\USBDriver\Setup.exe. (Double-click Setup or Setup.exe.)

* In the examples below, replace "D:" with the drive letter assigned to the USB drive mode device or the drive containing the extracted contents of the downloaded ZIP file.

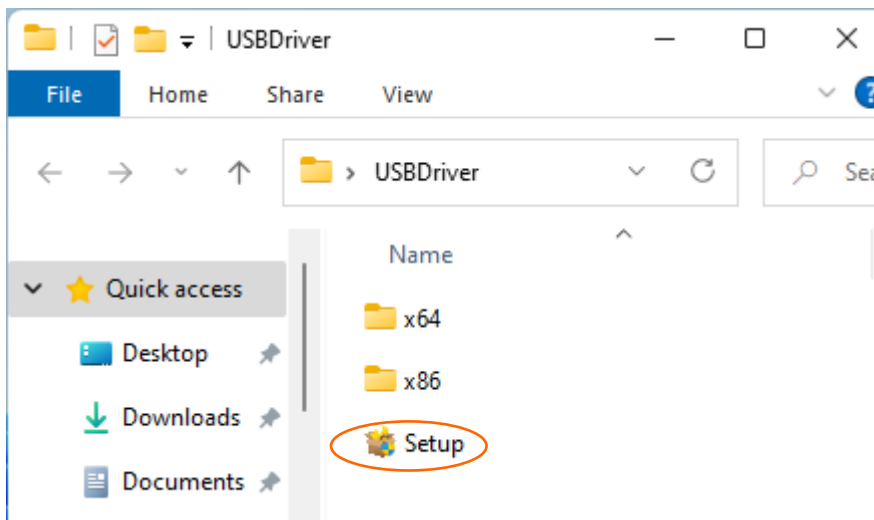

2-2. The User Account Control dialog box may appear.

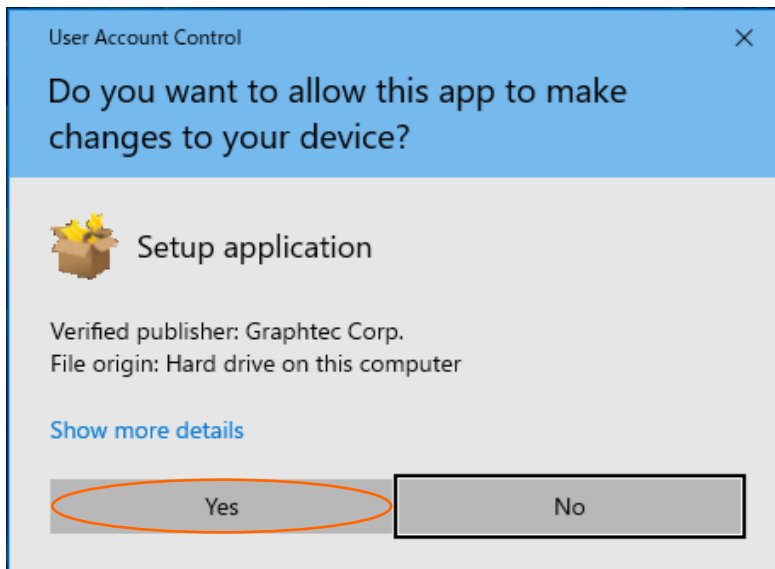


Press the [Yes] button when the User Account Control dialog box appears.

3. Installation Procedures

3-1. The device driver installer starts.

Driver: [Graphtec GL/MT/DM/WR Series USB Driver (version number)] is displayed.

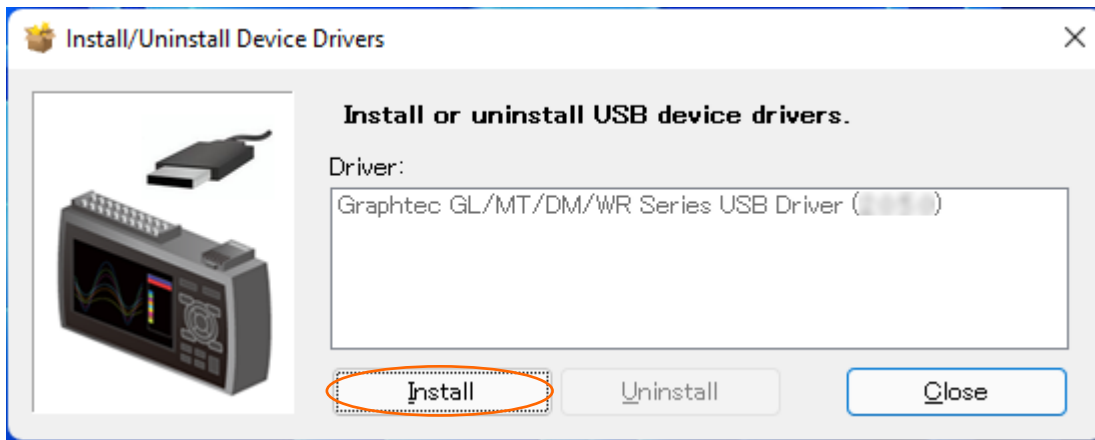


Press the [Install] button.

Note: If the [Install] button is unavailable, the USB driver is already installed.


Follow the steps in "[5. Uninstallation Procedures](#)" to uninstall the driver.

3-2. The "Installation complete." message box appears.

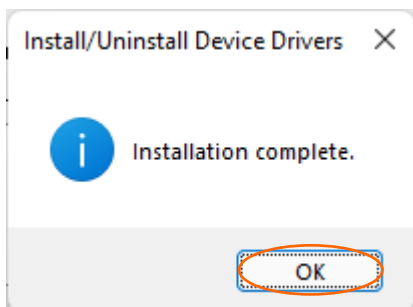

Press the [OK] button.

3-3. The installation completes.

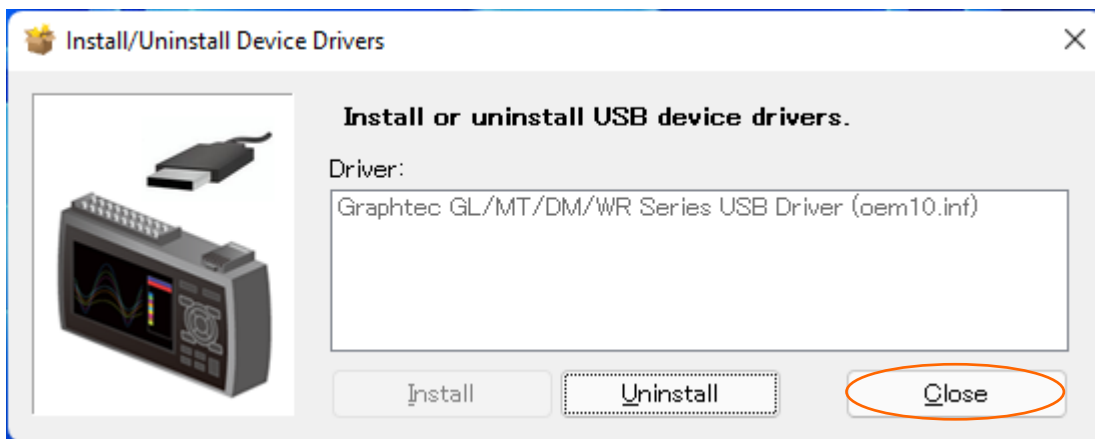

* The number in "oem10.inf" may vary depending on the environment.


Press the [Close] button to exit the installer.

4. Device Driver Confirmation Procedures

Confirm that the USB driver is correctly installed by following the procedures below.


When confirming the installation, turn on the GL series device and connect it to your PC using the USB cable.

4-1. Right-click the Start menu, and then select Device Manager.

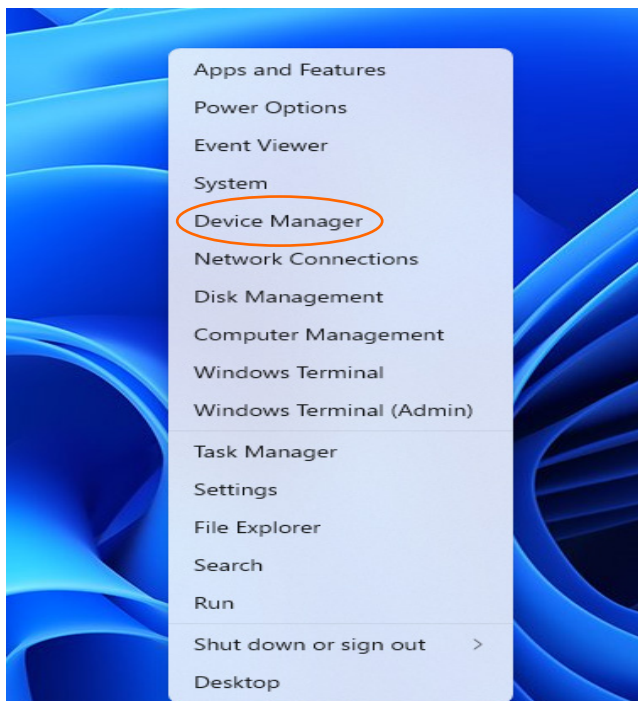


4-2. The User Account Control dialog may appear. When the User Account Control dialog is displayed, press the [Continue] button.

4-3. Device Manager opens.

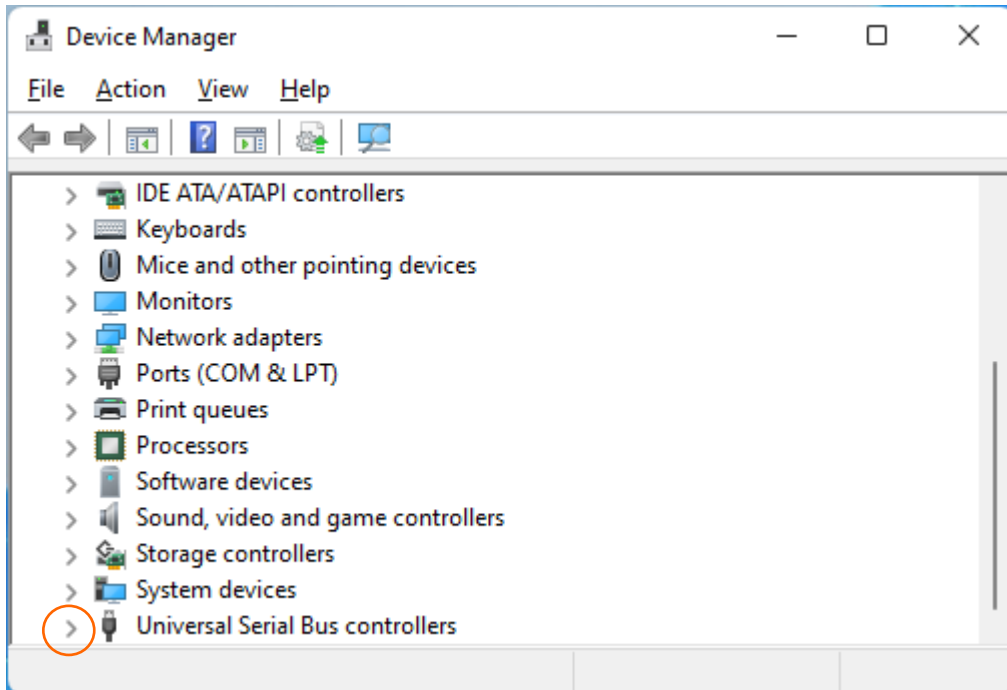

Click the white triangle next to “Universal Serial Bus controllers” to expand the tree structure.

4-4. Confirm the driver is recognized correctly.

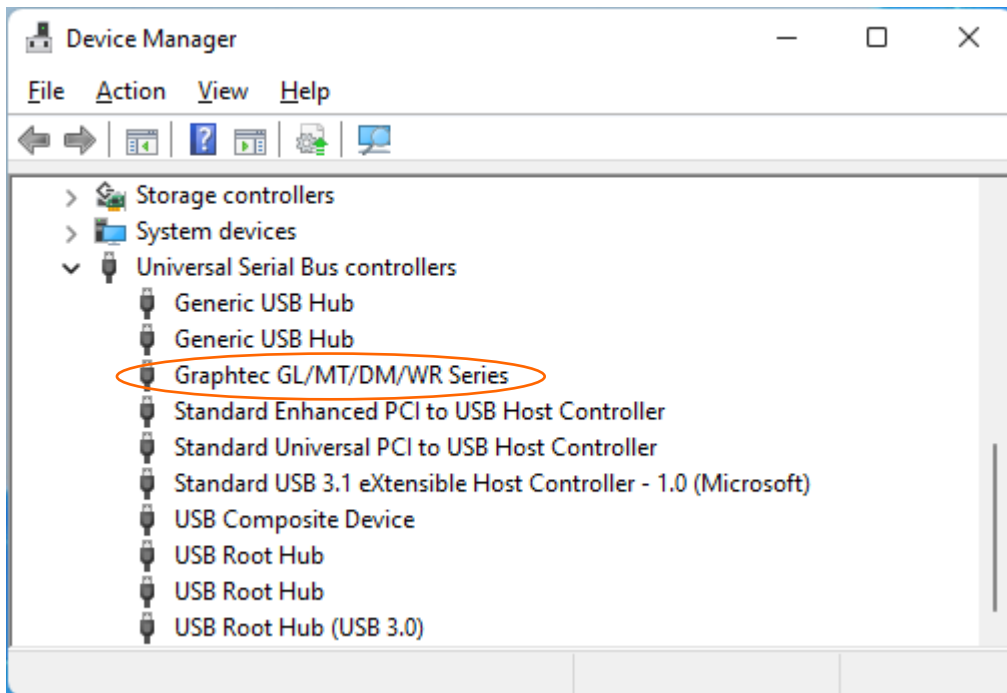

Confirm that "Gigabyte GL/MT/DM/WR Series" is displayed and that there is no "X" or "!" mark beside the name.

The USB driver installation is now complete.

5. Uninstallation Procedures


5-1. The device driver installer starts. (Double-click Setup or Setup.exe.)

The uninstallation screens differ between USB Driver Ver. 2.03 and Ver. 2.05 or later.

- If the driver is displayed as [Graphtec (GTCUSBR) USB (10/19/2009 2.0.3.0)], refer to ["5-2. When uninstalling USB Driver Ver. 2.03"](#).
- If the driver is displayed as [Graphtec GL/MT/DM/WR Series USB Driver (oem###.inf)], refer to ["5-3. When uninstalling USB Driver Ver. 2.05 or later"](#).


5-2. When uninstalling USB Driver Ver. 2.03:

(1) Driver: [Graphtec (GTCUSBR) USB (10/19/2009 2.0.3.0)] is displayed.

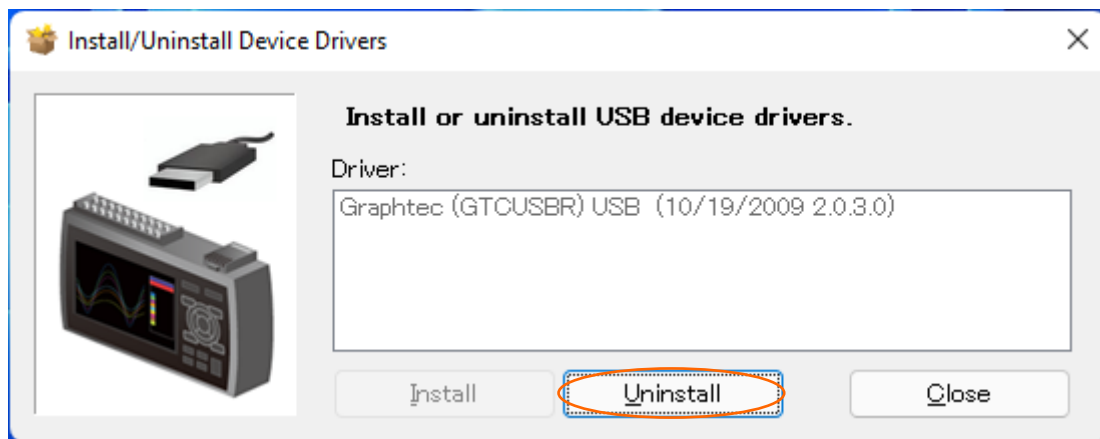


Press the [Uninstall] button.

(2) The "Uninstall Driver Package" message box appears.

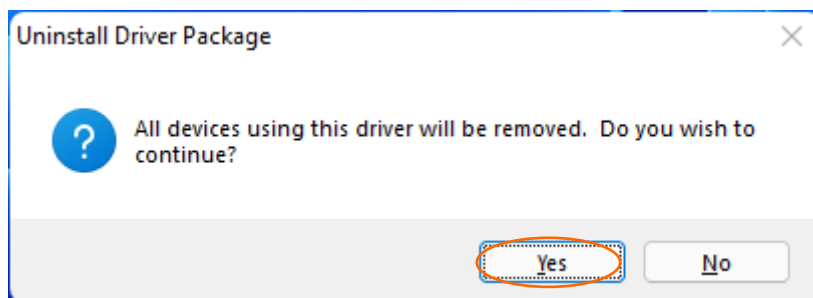

Press the [Yes] button.

(3) The uninstallation completes

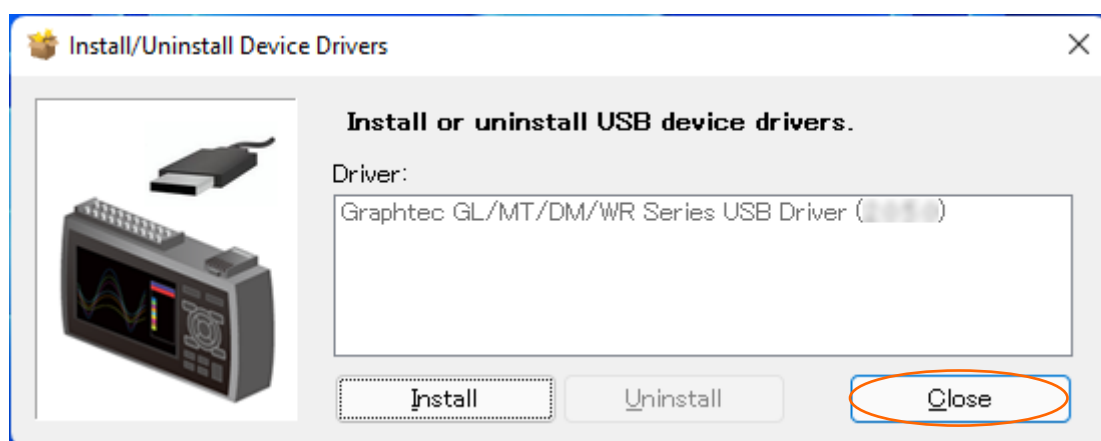


Press the [Close] button to exit the installer.

Note: For USB driver installation, follow the steps in "[3. Installation Procedures](#)".

5-3. When uninstalling USB Driver Ver. 2.05 or later:


(1) Driver: [Graphtec GL/MT/DM/WR Series USB Driver (oem###.inf)] is displayed.

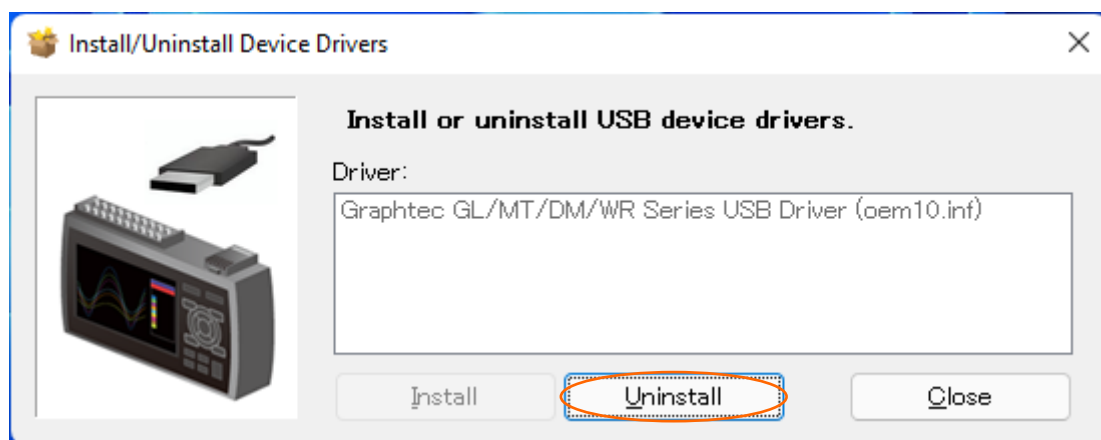

* The number in "oem10.inf" may vary depending on the environment.


Press the [Uninstall] button.

(2) The "Uninstallation complete." message box appears.

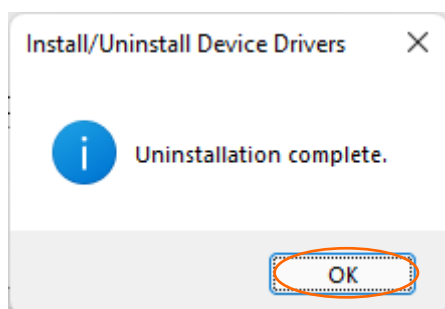

Press the [OK] button.

(3) The uninstallation completes.

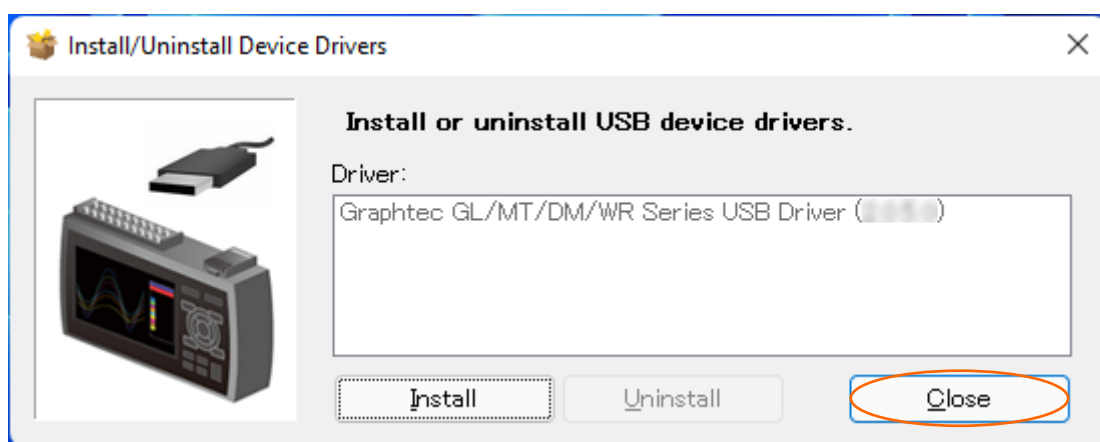

Press the [Close] button to exit the installer.

Note: For USB driver installation, follow the steps in "[3. Installation Procedures](#)".

Registered trademark information:

- Microsoft and Windows are registered trademarks of Microsoft Corporation USA in the United States and the other countries.
- The company names and product names written in this manual are registered trademarks or trademarks.



Specifications are subject to change without notice.

USB Driver Installation manual

GL-USB-UM-157

September 1, 2026, 7th edition-01

GRAPHTEC IWATSU Test Instruments Co., Ltd.